



































Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PR List	 Smart / List
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title

Original	Rechange
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Aspect	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Info/Display	 Info / Angle
 I/II/Nicam	 Shift + Audio / Lang I/II
 DVD/USB	 Shift + 2
 Text	 Text / Goto





Original	Rechange
 Subtitle	 Subtitle / EQ
 Size	 Zoom / Size
 Play/Pause/Index	 Play / Slow
 Stop/Reveal	 Stop / Hold
 Step/Subpage	 Pause / Step / Freeze
 Open/Close/Hol	 Eject / Surround
 I<</FAV	 I<< / Preset-
 >>ITv/Radio	 Shift + >> /
 <</Audio	 << / Tune-
 >>/EPG	 >> / Tune+
 Red/Prog	 Red / Netflix / Search
 Green/Zoom	 Green / APP / Repeat
 Yellow/Title	 Yellow / YouTube / Repeat
 Blue/DVD-Setup	 Blue / Prime Video / Random
 DVD-Menu	 D.Menu / Top
 Repeat	 Shift + Green / APP / Repeat
 A-B	 Shift + Yellow / YouTube / Repeat

Original	Rechange
 DVD-Lang	 Audio / Lang I/II

