



 

 



 

 


 

 



 
 
 










Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Recall	 Pre Ch
 Source	 AV
 Sound	 Shift + Dual
 Picture	 Format

Original	Rechange
 Audio 1/2	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Sleep	 Sleep
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Index	 Back





Original		Recharge		Original		Recharge	
TEXT	Text	REPEAT TEXT	Text				
LIST	List	DISC NAV LIST	List				
HOLD	Hold	HOME SMART	Smart				
SUBTITLE	Subtitle	AD SUBT	Subt				
INFO	Info	DISPLAY INFO	Info				
CANCEL	Cancel	CLEAR EXIT	Exit				
REVEAL	Reveal	SEARCH TV/R	TV/R				
ZOOM	Zoom	ZOOM	Eject				

