

 




 
 




 



 




 
 



 
 
 
 


| Original | Recharge | Original | Recharge |
|--------------|---|------------|--|
| On/Off |  Power | Menu Left |  Left |
| Audio Off |  Mute | Next |  >> |
| Slow Down |  Ch - | Progr. |  Sleep |
| Stop |  Stop | Prev. |  << |
| Slow Up |  Ch + | OK Enter |  Ok |
| Auto/Track |  Red | Top Menu |  +  Shift + Menu |
| Pause |  Pause | Menu Right |  Right |
| Subt. |  Subt | Menu Down |  Down |
| Rep/A-B |  +  Shift + Text | Volume+ |  Vol + |
| Title |  List | Volume- |  Vol - |
| Repeat/1/All |  Text | 1 |  1 |
| Zoom |  +  Shift + Eject | 2 |  2 |
| DVD/TV |  Media | 3 |  3 |
| Menu |  Menu | 4 |  4 |
| Menu Up |  Up | Mark |  +  Shift + Pre Ch |
| Display |  Info | Digest |  +  Shift + Info |
| Return |  Back | Rewind |  << |



| Original | Recharge | Original | Recharge |
|-------------|---|----------|--|
| Play |  | Play |  +  Shift + Subt |
| Record |  | Rec |  |
| F.Forward |  | >> |  Options |
| R/L |  | Green |  Dual |
| Pbc |  | Yellow |  3D |
| 5 |  | 5 | |
| 6 |  | 6 | |
| 7 |  | 7 | |
| 8 |  | 8 | |
| Video |  | Smart | |
| 9 |  | 9 | |
| Syst.Preset |  | D. Menu | |
| +10 |  | Guide | |
| Angle |  | Format | |
| 0 |  | 0 | |
| C/CH |  | Pre Ch | |
| Open/Close |  | Eject | |

