


 






 

 


 



 

 
 

 
 

 

 



 


Original	Recharge	Original	Recharge
On/Off	 Power	Menu Down	 Down
Audio Out	 Mute	T.Set/Clock	 Back
Slow Down	 Options	Tracking+	 Vol +
Stop	 Stop	Next	 >>
Pause	 Pause	Tracking-	 Vol -
Slow/Dpss-	 Subt	Prev.	  <<
Auto/Track	 Sleep	1	 1
Mon/TV	 TV/R	Audio	 Dual
Sp/Lp/Speed	 Text	2	 2
Slow/Dpss+	 Eject	3	 3
VCR/TV	 Smart	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Display	 Info	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	-/--	 Guide



Original	Recharge	Original	Recharge
0	 0	Once	 +  Shift + 1
Progr/C/CH	 Pre Ch	Index Pict+	 Ch +
Record	 Rec	Daily	 +  Shift + 2
On/Off	 +  Shift + Power	Weekly	 +  Shift + 3
Rewind	 <<	Otr/A.Otr	 +  Shift + 4
F.Forward	 >>	Rec. On/Off	 +  Shift + 5
Counter/Memor	 Green	Rec/Mode	 +  Shift + Rec
Play	 Play	PAL/Secam	 Format
Counter Stop	 Yellow		
Counter Clock	 Red		
Counter Reset	 Blue		
Info/Intro	 +  Shift + Info		
Show View	 Media		
Input Source	 AV		
Search Index	 +  Shift + Up		
Timer/Record	 +  Shift + AV		
Index Pict-	 Ch -		

