














 








 



 



 


 

 

 
 

 
 
 
 





 

 






 


 
 


Original	Recharge	Original	Recharge
On/Off	 Power	Menu Left	 Left
Repeat/1/All	 Text	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Slow Up	 Ch +	Menu Down	 Down
Stop	 Stop	Volume+	 Vol +
Auto/Track	 Media	Progr.	 Sleep
Pause	 Pause	Next	 >>
Subt.	 Subt	Volume-	 Vol -
Rep/A-B	 Blue	Top Menu	 D. Menu
Title	 List	Prev.	 <<
Menu	 Menu	1	 1
Repeat/1/All	 Yellow	2	 2
Menu Up	 Up	3	 3
Zoom	 Shift + Eject	4	 4
DVD/TV	 Smart	5	 5
Display	 Info	6	 6



Original	Recharge	
7		7
8		8
9		9
+10		Guide
0		0
C/CH		Pre Ch
Record		Rec
Rewind		<<
Resume	 + 	Shift + Play
Play		Play
Karaoke/Step	 + 	Shift + Pause
Game		TV/R
F.Forward		>>
Remain		Format
Timer	 + 	Shift + AV
Open/Close		Eject
Setup		Options

Original	Recharge	
Echo+	 + 	Shift + Ch +
Input Source		AV
Audio		Dual
Echo-	 + 	Shift + Ch -
Digest		3D
Angle		Red
Random		Green
Lang	 + 	Shift + Dual

