



 


 











 




 
 



 

 






 
 




 





 




	Original	Rechange		Original	Rechange
	Standby		Power		2
	Eject		Eject		3
	Subtitle		Subt		4
	Mute		Mute		5
	Clear		Exit		6
	Return		Back		7
	Menu		Menu		8
	Title		Media		9
	Setup		Options		0
	Zoom		Shift + Eject		+10
	Select		Ok		Play
	Up		Up		Stop
	Down		Down		Pause/Step
	Right		Right		<<
	Left		Left		>>
	PSM		AV		I<<
	1		1		I>>



