



| Original | Rechange |
|---|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  DTV/ATV |  Info / Angle |
|  0 |  0 |
|  Recall |  Back / Return |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Sleep |  Sleep / Timer |

| Original | Rechange |
|--|---|
|  Vol+ |  Vol+ |
|  MTS |  Setup / OPT / |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  RecList |  Smart / List |
|  CH- |  CH- / Page- |
|  FAV/List |  Fav / Marker / PC |
|  Rec |  Rec / Rec Mode |
|  Freeze |  Pause / Step / Freeze |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Source |  AV / Input / RDS |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Exit |  Exit / Cancel / Clear |
|  Down |  Down |





| Original | Recharge |
|-----------------|-------------------------------|
| Display | Display / Media |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| << | << / Tune- |
| Guide | Guide / EPG / -/-- |
| Play | Play / Slow |
| Pause/TimeShift | Shift + Pause / Step / |
| >>Aspect | >> / Tune+ |
| I<</Cancel | Shift + Exit / Cancel / Clear |
| I<</Cancel | I<< / Preset- |
| >>I/Sub.PG | >>I / Preset+ |
| Stop/Index | Stop / Hold |
| Tv/Radio | TV/Radio / |
| Subtitle | Subtitle / EQ |
| Reveal | D.Menu / Top |

| Original | Recharge |
|----------|----------------|
| Size | Zoom / Size |
| Hold | Shift + Stop / |
| Text | Text / Goto |

