











Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 Red	 Red / Netflix / Search
		 Red	 << / Tune-

Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 Red	 Red / Netflix / Search
		 Red	 << / Tune-







































Original	Recharge	Original	Recharge
 Green	 Green / APP / Repeat		
 >>	 >> / Tune+		
 Yellow	 Yellow / YouTube / Repeat		
 I<<	 I<< / Preset-		
 Blue	 Blue / Prime Video / Random		
 >>	 >>  / Preset+		
 [=]	 Text / Goto		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 [=+]	 Zoom / Size		
 Stop/Still	 Stop / Hold		
 Radio	 TV/Radio /		
 [=◆]/[++]	 Setup / OPT /		
 [=x]	 Picture / Format		
 [=o]/Subtitle	 Subtitle / EQ		
 DMP	 D.Menu / Top		
 Rec	 Rec / Rec Mode		







Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Text / Play/Pause	 Play / Slow
 Text / Play/Pause	 Pause / Step / Freeze
 Stop / Still	 Stop / Hold
 Rec	 Rec / Rec Mode
 Audio I/II	 Audio / Lang I/II
 Subtitle / [≡o]	 Subtitle / EQ
 [≡x]	 Picture / Format
 Size / Aspect	 Zoom / Size
 Sleep	 Sleep / Timer
 Radio	 TV/Radio /
 DMP	 D.Menu / Top
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle

Original	Rechange
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol +	 Vol+
 List	 Smart / List
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Index	 Display / Media
 CH -	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Recharge
6	6
7	7
8	8
9	9
EPG	Guide / EPG / -/--
0	0
Fav	Fav / Marker / PC
Red / <<	Red / Netflix / Search
Green / >>	Green / APP / Repeat
Yellow /  <<	Yellow / YouTube / Repeat
Blue / >>	Blue / Prime Video / Random
Text / Play/Pause	Shift + Play /
Red / <<	Shift + Red / Netflix /
Green / >>	Shift + Green / APP /
Yellow /  <<	Shift + Yellow / YouTube /
Blue / >>	Shift + Blue / Prime /

Original	Recharge

