

 









 









 

 

 

 

 

 

 

 

 



 

 

 


 
 

 





 

 














Original		Recharge		Original		Recharge	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		i/Info		Info / Angle
	1		1		PR-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Up		Up
	4		4		Q.Menu		D.Menu / Top
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	TV		TV/Radio /		Exit		Exit / Cancel / Clear
	0		0		World		Smart / List
	Recall		Shift + Back / Return		Music Photo		Picture / Format
	Vol+		Vol+		Guide		Guide / EPG / -/-
	Mute		Mute / Dimmer		*/o		Display / Media
	PR+		CH+ / Page+		*/o..		Shift + Display / Media





Original	Recharge
 ≡/Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Lang	 Audio / Lang I/II
 [≡]..	 Shift + Text /
 [-O-]	 Setup / OPT /
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Recharge

