



 
 
 
 




Original	Rechange
 Power	 Power
 Mute	 Mute
 Net+	 Smart
 DTV	 D. Menu
 USB	 Options
 YouTube	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch

Original	Rechange
 Tv Guide	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 Sound	 Shift + Dual
 Picture	 Format
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Back	 Back
 FAV	 Shift + Pre Ch
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok





Original	Recharge
 Info	 Info
 Sleep	 Sleep
 Audio	 Dual
 Subtitle	 Subt
 Text	 Text
 Text/Hold	 TV/R
 Text/DVD/Zoom	 Eject
 Power Display	 Shift + Power
 Rec	 Rec
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 Rec List	 List
 << PVR Media	 <<
 >> PVR Media	 >>
 Play	 Play
 Pause	 Pause

Original	Recharge
 Red/Goto	 Red
 Green/A-B	 Green
 Yellow/Angle/3D	 Yellow
 Blue/Repeat	 Blue

