









































 















 













Original	Rechange	Original	Rechange
 Power	 Power	 PR+	 CH+ / Page+
 AV Mode	 AV / Input / RDS	 Recall	 Back / Return
 Radio	 TV/Radio /	 0	 0
 Surround	 Eject / Surround	 Source	 Shift + AV / Input / RDS
 DTV	 Shift + TV/Radio / Program	 PR-	 CH- / Page-
 Mute	 Mute / Dimmer	 [<>]	 Picture / Format
 1	 1	 I/II/I+II	 Zoom / Size
 2	 2	 [i+]	 Info / Angle
 3	 3	 Sleep	 Sleep / Timer
 Vol+	 Vol+	 EPG	 Guide / EPG / -/-
 4	 4	 ESG	 Setup / OPT /
 5	 5	 DTV Menu	 Shift + D.Menu / Top Menu
 6	 6	 [≡]/Text	 Text / Goto
 Vol-	 Vol-	 Up	 Up
 7	 7	 Menu	 Menu / Home
 8	 8	 Left	 Left
 9	 9	 OK	 OK





Original	Recharge
Right	Right
END	Exit / Cancel / Clear
Down	Down
Return	Shift + Back / Return
[≡?]	Shift + Info / Angle
[≡+]	Stop / Hold
[...]	Subtitle / EQ
[≡o]	D.Menu / Top
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Recharge

