

 



 



 



 

 
 
 



 



 
 


 
 
 
 


 
 
 
 
 
 
 
 




 
 

 

 
 



 
 

 










Original		Recharge		Original		Recharge	
	POWER		Power		AD		Shift + Subt
	INPUT		AV		[i+]/[≡i]		Info
	1		1		P+		Ch +
	2		2		P-		Ch -
	3		3		VOL +		Vol +
	4		4		VOL -		Vol -
	5		5		MUTE		Mute
	6		6		TEXT [≡]		Text
	7		7		[...]		Subt
	8		8		Timer		Shift + AV
	9		9		EXIT		Exit
	0		0		∧		Up
	EPG		Guide		∨		Down
	DTV/ATV		TV/R		>		Right
	ASPECT		3D		<		Left
	FREEZE		Pause		OK		Ok
	O)I/II		Dual		MENU		Menu





Original		Rechange	
 RETURN	RETURN	 BACK	Back
 RED	RED	 A	Red
 GREEN	GREEN	 B	Green
 YELLOW	YELLOW	 C	Yellow
 BLUE	BLUE	 D	Blue
 REVEAL [≡?]	REVEAL [≡?]	 ZOOM	Eject
 TEXT HOLD	TEXT HOLD	 E-MANUAL D.MENU	D. Menu
 TEXT SIZE	TEXT SIZE	 PICTURE FORMAT	Format
 [≡x]	[≡x]	 SETTINGS OPT	Options

Original		Rechange	

