







 



 

 



















Original		Recharge		Original		Recharge	
	Power		Power				
	Bluetooth		9				
	Source		AV / Input / RDS				
	Vol+		Vol+				
	Vol-		Vol-				
	Mute		Mute / Dimmer				
	>>		>> / Preset+				
	<<		<< / Preset-				
	Play/Pause		Play / Slow				
	Play/Pause		Pause / Step / Freeze				
	Bass+		Right				
	Bass-		Left				
	EQ		Subtitle / EQ				
	Tre+		Up				
	Tre-		Down				





Original	Recharge	Original	Recharge
Power		>	>> / Preset+
Optical		>	Right
Optical		Vol-	Vol-
Mute		Vol-	Down
AUX		News	Audio / Lang I/II
AUX		Movie	Picture / Format
BT		Music	Sound / Title
BT			
HDMI ARC			
HDMI ARC			
Vol+			
Vol+			
I<			
I<			
Play/Pause / Pair			
Play/Pause / Pair			
Play/Pause / Pair			

