



Original	Recharge
 Power	 Power
 OPC	 Smart
 Sleep	 Sleep
 Select	 Shift + Ok
 [i+]	 Info
 [[<>]]	 Format
 AV Mode	 Shift + AV
 [Mute]	 Options
 [FF]	 Shift + Options
 Card	 Media
 REC Stop	 Rec
 3D-Y/C	 Shift + 3
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5

Original	Recharge
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 DTV	 TV/R
 [...]	 Subt
 [≡?]	 3D
 [≡i]	 Shift + Info
 [≡]	 Text
 Sound	 Dual
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -





	Original	Rechange	Original	Rechange
	Input	 AV		AV
	DTV Menu	 D. Menu		D. Menu
	Menu	 Menu		Menu
	Guide	 Guide		Guide
	List	 List		List
	Up	 Up		Up
	Left	 Left		Left
	Right	 Right		Right
	OK	 Ok		Ok
	Down	 Down		Down
	Exit	 Exit		Exit
	Return	 Back		Back
	Red	 Red		Red
	Green	 Green		Green
	Yellow	 Yellow		Yellow
	Blue	 Blue		Blue

