












 
























 




 



























Original	Recharge	Original	Recharge
 Power	 Power	 I<<	 I<< / Preset-
 Control	 Setup / OPT /	 Stop	 Stop / Hold
 [i+]	 Info / Angle	 >>I	 >>I / Preset+
 P.Info	 Smart / List	 1	 1
 ATV	 Shift + Smart / List	 2	 2
 DTV	 Shift + Display / Media	 3	 3
 SAT	 Shift + 0	 4	 4
 Radio	 TV/Radio /	 5	 5
 Power Ext. Media	 Shift + Power	 6	 6
 ←	 Shift + Left	 7	 7
 Pause	 Pause / Step / Freeze	 8	 8
 →	 Shift + Right	 9	 9
 Rec	 Rec / Rec Mode	 Recall	 Fav / Marker / PC
 <<	 << / Tune-	 0	 0
 Play	 Play / Slow	 Source	 AV / Input / RDS
 >>	 >> / Tune+	 I/II/I+II/▼/O	 Audio / Lang I/II
 Rec Stop	 Shift + Stop / Hold	 [ <> ]	 Picture / Format

Hold





Original	Rechange
 AV Mode	 Shift + AV / Input / RDS
 Eco	 Display / Media
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 P+	 CH+ / Page+
 [≡]	 Text / Goto
 Vol-	 Vol-
 P-	 CH- / Page-
 Home	 Menu / Home
 EPG	 Guide / EPG / -/--
 Nothing	 Eject / Surround
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 End	 Exit / Cancel / Clear
 Down	 Down

Original	Rechange
 Back	 Back / Return
 [...]	 Subtitle / EQ
 [≡?]	 D.Menu / Top
 [≡o]	 Sleep / Timer
 [≡♦]	 Zoom / Size
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

