





































 







| Original | | Rechange | | Original | | Rechange | |
|---|-----------------|---|-----------------------|---|--------------------|---|-------------------------|
|  | RDS ASPM |  | D.Menu / Top |  | 9 |  | 9 |
|  | Direct |  | Info / Angle |  | 0 |  | 0 |
|  | RDS PTY |  | Text / Goto |  | +10 |  | Guide / EPG / -/- |
|  | On Screen |  | Smart / List |  | Memory / |  | Mute / Dimmer |
|  | RDS Display |  | Setup / OPT / |  | Zoom |  | Zoom / Size |
|  | Clear / Display |  | Display / Media |  | Subtitle |  | Subtitle / EQ |
|  | Clear / Display |  | Exit / Cancel / Clear |  | Menu |  | Menu / Home |
|  | On / Stand By |  | Power |  | Up / Tuning+ |  | Shift + Tune+ / >> / |
|  | 1 |  | 1 |  | Up / Tuning+ |  | Up |
|  | 2 |  | 2 |  | Return |  | Back / Return |
|  | 3 |  | 3 |  | Left |  | Left |
|  | Clock / Timer |  | Sleep / Timer |  | Enter |  | OK |
|  | 4 |  | 4 |  | Right |  | Right |
|  | 5 |  | 5 |  | >> / >> / |  | >> / Tune+ |
|  | 6 |  | 6 |  | I<< / << / Preset- |  | I<< / Preset- |
|  | 7 |  | 7 |  | I<< / << / Preset- |  | << / Tune- |
|  | 8 |  | 8 |  | Down / Tuning- |  | Shift + Tune- / << / |

Tune-





| Original | Recharge |
|----------------|-----------------------------|
| Down / Tuning- | Down |
| >>I / >> / | >>I / Preset+ |
| USB Play/Pause | Pause / Step / Freeze |
| Slow | Shift + Play / |
| DVD/CD | Play / Slow |
| Stop | Stop / Hold |
| Still | Shift + Pause / Step / |
| DVD/CD | Shift + 2 |
| DVD/CD | Shift + 3 |
| DVD/CD | Green / APP / Repeat |
| USB | Shift + 8 |
| USB | Blue / Prime Video / Random |
| AUX | Shift + 7 |
| AUX | Red / Netflix / Search |
| TUNER | Shift + 6 |
| TUNER | Yellow / YouTube / Repeat |
| Audio | Audio / Lang I/II |

| Original | Recharge |
|----------|---------------|
| Dolby VS | Sound / Title |
| Volume- | Vol- |
| Volume+ | Vol+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

