


 

















 

 

 

 

 











Original	Recharge
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Back	 Back
 Nicam	 D. Menu
 Aspect	 Format
 Sleep	 Sleep

Original	Recharge
 DTV	 Smart
 Source	 AV
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Freeze	 Shift + Pause
 Media	 Media
 Rec	 Rec
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 P.Mode	 Shift + Format





Original		Recharge		Original		Recharge	
	S.Mode		Shift + Dual		Green		Green
	Play/Pause		Play		Yellow		Yellow
	Stop		Stop		Cyan		Blue
	Play/Pause		Pause				
	<< / Index		<<				
	>> / Size		>>				
	I<< / Reveal		I<<				
	>>I / Subpage		>>I				
	Text		Text				
	Hold		Shift + Stop				
	EPG		Guide				
	Subtitle		Subt				
	Info		Info				
	FAV		Pre Ch				
	Audio		Dual				
	TV / Radio		TV/R				
	Red		Red				

