




 
 



 





 
 



 
 


 



 
 

 
 
 
 

 

 
 
 

 

 


 
 
 
 

 
 
 

 
 

 
 
 

 







Original		Rechange		Original		Rechange	
	Standby		Power		Down		Down
	Rec PVR		Rec		Right		Right
	List PVR		Smart		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Media		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Favourite		Pre Ch		7		7
	Tv/Radio		TV/R		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back









 
 


 



 



 
 




 




 
 

 

 
 


 
 
 

 
 






 
 











 






	Original	Recharge	Original	Recharge
	Goto	AV		
	<<	<<		
	>>	>>		
	I<<	I<<		
	>>I	>>I		
	Play	Play		
	Pause	Pause		
	Stop	Stop		
	Repeat	+  Shift + Text		
	Red	Red		
	Green	Green		
	Yellow	Yellow		
	Blue	Blue		





Original		Rechange		Original		Rechange	
	Standby		Power		Down		Down
	Rec PVR		Rec		Right		Right
	List PVR		List		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Media		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Favourite		Pre Ch		7		7
	Tv/Radio		TV/R		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back





	Original	Recharge	Original	Recharge
	Goto	 Options		
	<<	 <<		
	>>	 >>		
	<<	  <<		
	>>	 >>		
	Play	 Play		
	Pause	 Pause		
	Stop	 Stop		
	Repeat	 +  Shift + Text		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		

