















 













 



 







 







 



 



 







 








 


 





Original	Recharge	Original	Recharge
 Power	 Power	 0	 0
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 Rec	 Rec / Rec Mode	 <<	 << / Tune-
 TV Sys.	 D.Menu / Top	 Vol -	 Vol-
 Browser	 Display / Media	 Vol +	 Vol+
 Copy	 Picture / Format	 I<<	 I<< / Preset-
 Music	 Smart / List	 I>>	 I>> / Tune+
 1	 1	 Play / Pause	 Play / Slow
 2	 2	 Play / Pause	 Pause / Step / Freeze
 3	 3	 Stop	 Stop / Hold
 4	 4	 >>I	 >>I / Preset+
 5	 5	 Home	 Shift + Menu /
 6	 6	 Up	 Up
 7	 7	 Return	 Back / Return
 8	 8	 Left	 Left
 9	 9	 Enter	 OK
 Repeat	 Shift + Green / APP / Repeat	 Right	 Right

Original	Recharge	Original	Recharge
 0	 0	 HDMI - BAT	 0
 Info	 Info / Angle	 <<	 << / Tune-
 Vol -	 Vol-	 Vol +	 Vol+
 I<<	 I<< / Preset-	 I>>	 I>> / Tune+
 Play / Pause	 Play / Slow	 Pause / Step / Freeze	 Pause / Step / Freeze
 Stop	 Stop / Hold	 >>I	 >>I / Preset+
 Home	 Shift + Menu /	 Up	 Up
 Return	 Back / Return	 Left	 Left
 Enter	 OK	 Right	 Right





Original		Rechange	
	Menu		Menu / Home
	Down		Down
	Setup		Setup / OPT /
	Time Shift		Sleep / Timer
	Slow I>		Shift + Play /
	A-B		Shift + YouTube /
	Goto		Shift + Text /
	Zoom		Zoom / Size
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Shift + Info / Angle
	Red		Red / Netflix / Search
	Green / EPG		Green / APP / Repeat
	Green / EPG		Guide / EPG / -/--
	Yellow / Text		Text / Goto
	Yellow / Text		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Rechange

