





Original	Rechange
Standby	Power
Sub-T	Subtitle / EQ
TTX	Text / Goto
Mute	Mute / Dimmer
EPG	Guide / EPG / -/--
GOTO	Shift + Text /
Page +	CH+ / Page+
Audio	Audio / Lang I/II
Repeat	Shift + 0
Page -	CH- / Page-
Menu	Menu / Home
Up / CH +	Up
Up / CH +	Shift + Up
Exit	Exit / Cancel / Clear
Left / Vol -	Shift + Left
Left / Vol -	Left
OK	OK

Original	Rechange
Right / Vol +	Shift + Right
Right / Vol +	Right
FAV	Fav / Marker / PC
Down / CH -	Shift + Down
Down / CH -	Down
TV / Radio	TV/Radio /
1	1
2	2
3	3
Recall	Back / Return
4	4
5	5
6	6
Info	Info / Angle
7	7
8	8
9	9



 

 

 



 









 



 





 
 
 



 













 



 

 

 

 

 

 







Original		Recharge	
	0		0
	<< Rev		<< / Tune-
	>> Fwd		>> / Tune+
	I<< Prev		I<< / Preset-
	>>I Next		>>I / Preset+
	Play		Play / Slow
	Pause / Timeshift		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Red / PVR		Red / Netflix / Search
	Green / V-Format		Shift + Green / APP / Repeat
	Green / V-Format		Green / APP / Repeat
	Yellow / Aspect		Shift + Yellow / YouTube / Repeat
	Yellow / Aspect		Yellow / YouTube / Repeat
	Blue / Timer		Blue / Prime Video / Random
	Blue / Timer		Shift + Blue / Prime Video / Random

Original		Recharge	





	Original	Rechange	Original	Rechange
	Power	 Power	 Vol+	 Vol+
	SUB-T	 Subtitle / EQ	 FAV	 Fav / Marker / PC
	TTX	 Text / Goto	 Down/CH-	 Down
	Mute	 Mute / Dimmer	 Tv/Radio	 TV/Radio /
	EPG	 Guide / EPG / -/--	 1	 1
	Goto	 Shift + Text /	 2	 2
	Page+	 CH+ / Page+	 3	 3
	Lang	 Audio / Lang I/II	 Recall	 Back / Return
	Repeat	 Shift + Green / APP /	 4	 4
	Page-	 CH- / Page-	 5	 5
	Menu	 Menu / Home	 6	 6
	Up/CH+	 Up	 Info	 Info / Angle
	Exit	 Exit / Cancel / Clear	 7	 7
	Left	 Left	 8	 8
	Vol-	 Vol-	 9	 9
	OK	 OK	 0	 0
	Right	 Right	 <<	 << / Tune-



