



Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 <X>	 Fav / Marker / PC
 Search	 Shift + Red / Netflix / Search
 TV	 TV/Radio /
 Home/VOD	 Shift + Menu /
 Menu	 Menu / Home

Original	Recharge
 Vol+	 Vol+
 Vol-	 Vol-
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Back	 Back / Return
 *	 Smart / List
 i	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-





Original		Rechange		Original		Rechange	
	Play		Play / Slow				
	>>		>> / Tune+				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	EPG		Guide / EPG / -/--				
	?		Subtitle / EQ				
	...♪		Sound / Title				
	A-z		Zoom / Size				
	[=]		Text / Goto				
	*		Setup / OPT /				

