



 



 






 



 



 



 



 



 


 
 






 
























Original		Recharge		Original		Recharge	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Home		Menu / Home
	1		1		P-		CH- / Page-
	2		2		*		D.Menu / Top
	3		3		Up		Up
	4		4		i		Info / Angle
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	EPG		Guide / EPG / -/--		Exit		Exit / Cancel / Clear
	0		0		Netflix		Shift + Red / Netflix /
	TXT		Text / Goto		YouTube		Shift + Yellow / YouTube /
	Vol+		Vol+		*1		Smart / List
	Input		AV / Input / RDS		*2		Display / Media
	P+		CH+ / Page+		Red		Red / Netflix / Search





	Original	Recharge	Original	Recharge
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	<<	 << / Tune-		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Audio	 Audio / Lang I/II		

