 




| Original | | Recharge | | Original | | Recharge | |
|---|---------------|---|----------------------------|---|----------|---|-----------------------|
|  | Power |  | Power |  | Return |  | Back / Return |
|  | Program |  | Shift + TV/Radio / Program |  | Up |  | Up |
|  | Subtitle/Copy |  | Subtitle / EQ |  | Left |  | Left |
|  | Open/Close |  | Eject / Surround |  | Enter |  | OK |
|  | Display |  | Display / Media |  | Right |  | Right |
|  | Step |  | Shift + Pause / Step / |  | Angle |  | Shift + Info / Angle |
|  | ↔/A-B |  | Shift + Yellow / YouTube / |  | Down |  | Down |
|  | Repeat |  | Shift + Green / APP / |  | USB |  | Shift + 8 |
|  | V-Mode |  | Picture / Format |  | Menu |  | Menu / Home |
|  | N/P |  | Exit / Cancel / Clear |  | Play |  | Play / Slow |
|  | PBC |  | Sound / Title |  | Pause |  | Pause / Step / Freeze |
|  | Zoom |  | Zoom / Size |  | Stop/PVR |  | Stop / Hold |
|  | Text/Title |  | Text / Goto |  | Vol+ |  | Vol+ |
|  | DVD/DVB |  | Smart / List |  | EPG |  | Guide / EPG / -/- |
|  | Audio |  | Audio / Lang I/II |  | Info |  | Info / Angle |
|  | Tv/Radio |  | TV/Radio / |  | Mute |  | Mute / Dimmer |
|  | Setup |  | Setup / OPT / |  | Vol- |  | Vol- |





| Original | Rechange |
|----------|---------------------------------------|
| 1 | TV 1 |
| 2 | DVD 2 |
| 3 | CD - STB 3 |
| 4 | VIDEO 4 |
| 5 | TAPE 5 |
| 6 | TUNER 6 |
| 7 | AUX - HDD 7 |
| 8 | USB 8 |
| 9 | BLUETOOTH 9 |
| 10 | HDMI - SAT 0 |
| 10+ | PC FAV MARKER Fav / Marker / PC |
| GOTO | SHIFT + GOTO TEXT Shift + Text / |
| REV | TUNE- << / Tune- |
| FWD | TUNE+ >> / Tune+ |
| PREV | PRESET- << / Preset- |
| NEXT | PRESET+ >> / Preset+ |
| Red | NETFLIX SEARCH Red / Netflix / Search |

| Original | Rechange |
|----------|--|
| Green | APP REPEAT Green / APP / Repeat |
| Yellow | YouTube REPEAT A-B Yellow / YouTube / Repeat |
| Blue/FAV | Prime Video RANDOM Blue / Prime Video / Random |

