



Original	Rechange
Source	AV / Input / RDS
Sync Menu	Setup / OPT /
Power	Power
Digital/Analog	Display / Media
Tv/Radio	TV/Radio /
Football	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Exit	Exit / Cancel / Clear
0	0

Original	Rechange
Teletext	Text / Goto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[i+]/[?]	Info / Angle
Netflix	Shift + Red / Netflix /
Help	Sleep / Timer
TV	Shift + 1
Action Menu	D.Menu / Top
Up	Up
Guide	Guide / EPG / -/--
Left	Left
OK	OK
Right	Right
Back	Back / Return
Down	Down





Original	Recharge
Home	Menu / Home
Discover	Fav / Marker / PC
Vol+	Vol+
O	Picture / Format
PR+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
PR-	CH- / Page-
Audio	Audio / Lang I/II
[...]	Subtitle / EQ
[+]	Zoom / Size
<< button"/> <<	<< / Tune-
Play	Play / Slow
>> button"/> >>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
>>I	>>I / Preset+

Original	Recharge
Rec	Rec / Rec Mode
Stop	Stop / Hold
Title List	Smart / List

