 
 
 

 





 

 



 

 

 

 

 


 
 







 

 




 









 




 

 


 

 


Original		Rechange		Original		Rechange	
	Eject		Eject / Surround		3		3
	Tv Power		Shift + Power		3 TV		Shift + 3
	Power		Power		Function		Shift + Setup / OPT / Tools
	Stereo/mono		Shift + Sound / Title		Audio		Audio / Lang I/II
	Name		AV / Input / RDS		4		4
	Dimmer		Shift + Mute / Dimmer		4 TV		Shift + 4
	Repeat		Green / APP / Repeat		5		5
	Tv/Video		TV/Radio /		5 TV		Shift + 5
	Clear		Exit / Cancel / Clear		6		6
	Memory		Shift + D.Menu / Top Menu		6 TV		Shift + 6
	Time		Sleep / Timer		Band		Picture / Format
	Muting		Mute / Dimmer		Angle		Info / Angle
	Play Mode		Play / Slow		7		7
	1		1		7 TV		Shift + 7
	1 TV		Shift + 1		8		8
	2		2		8 TV		Shift + 8
	2 TV		Shift + 2		9		9





Original	Rechange
 9 TV	 Shift + 9
 Sound Field	 Sound / Title
 Subtitle	 Subtitle / EQ
 >10	 Guide / EPG / -/--
 >10 TV	 Fav / Marker / PC
 0/10	 0
 0/10 TV	 Shift + 0
 Enter	 Shift + OK
 Display	 Display / Media
 Vol+	 Vol+
 Vol+ Tv	 Shift + Vol+
 Vol-	 Vol-
 Vol- Tv	 Shift + Vol-
 I<<	 I<< / Preset-
 I<< TV	 Shift + I<< / Preset-
 >>I	 >>I / Preset+
 >>I TV	 Shift + >>I / Preset+

Original	Rechange
 <<	 << / Tune-
 >>	 >> / Tune+
 Play/Select	 Shift + Play /
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 DVD Display	 Shift + Display / Media
 DVD Top Menu	 Menu / Home
 Up	 Up
 DVD Menu	 D.Menu / Top
 Return	 Back / Return
 Left	 Left
 OK	 OK
 Enter TV	 Shift + Down
 Right	 Right
 DVD Setup	 Setup / OPT /
 AMP Menu	 Shift + Menu /
 Down	 Down

