


 



 
 




 



 



 


 

 

 

 
 
 

 
 

 
 






 

 

 
 



 
 


 


 
 

 



 








 


 
 







 



 



 

 





Original	Recharge	Original	Recharge
 Power	 Power	 Action Menu	 Shift + Menu
 1	 1	 Home	 Sleep
 2	 2	 Guide	 Guide
 3	 3	 Back	 Back
 4	 4	 TV	 Options
 5	 5	 Recall	 Pre Ch
 6	 6	 Help	 3D
 7	 7	 [≡]	 Text
 8	 8	 [i+]/[?]	 Info
 9	 9	 Red	 Red
 0	 0	 Green	 Green
 Exit	 Exit	 Yellow	 Yellow
 Tv/Radio	 TV/R	 Blue	 Blue
 Sync Menu	 Menu	 OK	 Ok
 Source	 AV	 Up	 Up
 Netflix	 Media	 Down	 Down
 Digital/Analog	 Smart	 Right	 Right





Original	Rechange	Original	Rechange
 Left	 Left	 Discover	 D. Menu
 Vol+	 Vol +		
 Vol-	 Vol -		
 Prog+	 Ch +		
 Prog-	 Ch -		
 Audio	 Dual		
 [...]	 Subt		
 Title List	 Format		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 >>	 >>		
 <<	 <<		
 I<<	 I<<		
 >>I	 >>I		
 Rec	 Rec		
 Mute	 Mute		

