







 

 

 

 
 











 
 
 

 

 

 

 

 
 


 











 



 

 

 


 
 


Original	Recharge
Power	Power
I<<	I<<
←	Shift + Left
→	Shift + Right
>>I	>>I
<<	<<
Play	Play
>>	>>
Sync Menu	Smart
Pause	Pause
Stop	Stop
Theatre	TV/R
[+]	3D
Digital	Media
Analog	Shift + Media
[...]	Subt
Audio	Dual

Original	Recharge
[i]/[?]	Info
Guide	Guide
Input	AV
Up	Up
Right	Right
Down	Down
Left	Left
OK	Ok
Return	Back
Home	Shift + Smart
Options	Options
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
1	1
2	2






 
 

 




 
 

 
 


 





 




 

 
 


 
 

 
 
 
 


 





 

 


 
 

 



 









Original		Rechange		Original		Rechange	
	Power		Power		1		1
	I<<		I<<		2		2
	>>I		>>I		3		3
	<<		<<		4		4
	Play		Play		5		5
	>>		>>		6		6
	Pause		Pause		7		7
	Stop		Stop		8		8
	[...]		Subt		9		9
	AD		Shift + Subt		0		0
	[i+]/[?]		Info		Prog+		Ch +
	Up		Up		Prog-		Ch -
	Right		Right		Recall		Pre Ch
	Down		Down		Rec		Rec
	Left		Left		Top Menu		Shift + Menu
	OK		Ok		Menu		Menu
	Return/Back		Back				







 


 
 








 


 
 



 
 
 






 









 
 


 
 





 

 

 

 

 

 


Original	Rechange	Original	Rechange
 Power	 Power	 Return/Back	 Back
 I<<	 I<<	 Home	 Smart
 ←	 Ch -	 Options	 Options
 →	 Ch +	 Red	 Red
 >>I	 >>I	 Green	 Green
 <<	 <<	 Yellow	 Yellow
 Play	 Play	 Blue	 Blue
 >>	 >>	 1	 1
 Pause	 Pause	 2	 2
 Stop	 Stop	 3	 3
 AD	 Subt	 4	 4
 [i+]	 Info	 5	 5
 Up	 Up	 6	 6
 Right	 Right	 7	 7
 Down	 Down	 8	 8
 Left	 Left	 9	 9
 OK	 Ok	 0	 0







Original	Rechange	Original	Rechange
 Power	 Power	 Left	 Left
 I<<	 I<<	 OK	 Ok
 ←	 Ch -	 Return/Back	 Back
 →	 Ch +	 Home	 Smart
 >>I	 >>I	 1	 1
 <<	 <<	 2	 2
 Play	 Play	 3	 3
 >>	 >>	 4	 4
 Pause	 Pause	 5	 5
 Stop	 Stop	 6	 6
 [...] AD	 Shift + Subt	 7	 7
 [i+]/[?]	 Info	 8	 8
 Source	 AV	 9	 9
 Up	 Up	 0	 0
 Right	 Right	 [≡]/Text	 Text
 Down	 Down	 Mute	 Mute
		 Vol+	 Vol +



