

 







 









 



 



 

 



 



 







 







 

















Original	Recharge	Original	Recharge
Power	Power	0/10	0
Stereo/Mono	Shift + Sound / Title	+10	Guide / EPG / -/-
Tv/Video	TV/Radio /	Display	Display / Media
Memory	Smart / List	Vol+	Vol+
Muting	Mute / Dimmer	Vol-	Vol-
1	1	Tv CH-	CH- / Page-
2	2	Tv CH+	CH+ / Page+
3	3	Enter	OK
Function	Setup / OPT /	AMP Menu	Menu / Home
4	4		
5	5		
6	6		
Band	Audio / Lang I/II		
7	7		
8	8		
9	9		
Sound/Field	Sound / Title		




















 

 

 
 


 

















Original	Rechange	Original	Rechange
 Power	 Power	 DVD Menu	 D.Menu / Top
 Muting	 Mute / Dimmer	 Function	 Setup / OPT /
 Play Mode	 Play / Slow	 AMP Menu	 Menu / Home
 Pause	 Pause / Step / Freeze	 Up	 Up
 Stop	 Stop / Hold	 Angle	 Info / Angle
 <</Tuning-/<l	 << / Tune-	 Left	 Left
 Tuning+/Slow	 >> / Tune+	 Enter	 OK
 I<</Preset-	 I<< / Preset-	 Right	 Right
 >>I/Preset+	 >>I / Preset+	 Clear	 Exit / Cancel / Clear
 Sound Field	 Sound / Title	 Down	 Down
 Audio	 Audio / Lang I/II	 Return	 Back / Return
 Subtitle	 Subtitle / EQ	 Vol+	 Vol+
 Open/Close	 Eject / Surround	 Memory	 Smart / List
 Band	 Picture / Format	 Vol-	 Vol-
 Name	 Zoom / Size	 Display	 Display / Media
 Time	 Sleep / Timer	 1	 1
 Tv/Video	 TV/Radio /	 2	 2





	Original	Rechange		Rechange
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	+10		Guide / EPG / -/--	
	0/10		0	
	Repeat		Green / APP / Repeat	
	Dimmer		+ 	Shift + Mute / Dimmer
	Play/Select		+ 	Shift + Play /
	Title		+ 	Shift + Sound / Title
	Stereo/Mono		+ 	Shift + Audio / Lang I/II
	Enter		+ 	Shift + OK
	DVD Display		+ 	Shift + 2
	DVD Setup		+ 	Shift + 3

	Original		Rechange

