


 





 



 

 



 







 


 
 

 

 


 

 
 
 
 
 
 

 





 
 


 



 
 
 

 








Original		Recharge		Original		Recharge	
	Power		Power		Green		Green
	Input		AV		Yellow		Yellow
	Digital/Analog		TV/R		Blue		Blue
	Sync Menu		Menu		Netflix		Media
	1		1		[i+]/[?]		Info
	2		2		Home		Smart
	3		3		Sleep		Sleep
	4		4		Guide		Guide
	5		5		Return		Back
	6		6		Options		Options
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	Exit		Exit		OK		Ok
	[≡]/Text		Text		Vol+		Vol +
	Red		Red		Vol-		Vol -





	Original	Recharge		Original	Recharge
	Mute	 Mute			
	PR+	 Ch +			
	PR-	 Ch -			
	Recall	 Pre Ch			
	[...]	 Subt			
	Audio	 Dual			
	Title List	 List			
	<<	 <<			
	Play	 Play			
	>>	 >>			
	I<<	 I<<			
	Pause	 Pause			
	>>I	 >>I			
	Rec	 Rec			
	Stop	 Stop			
	[+]	 3D			

