 

 



 


 



























Original	Rechange
 Source	 AV / Input / RDS
 Power	 Power
 Digital/Analog	 Setup / OPT /
 Tv/Radio	 TV/Radio /
 Sync Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [i]/[?]	 Info / Angle
 0	 0

Original	Rechange
 [≡]/Text	 Text / Goto
 Google Play	 Display / Media
 Netflix	 Shift + Red / Netflix /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Action Menu	 D.Menu / Top
 Tv	 Shift + 1
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Shift + Menu / Home





Original		Rechange		Original		Rechange	
	Discover		Picture / Format		Stop		Stop / Hold
	Vol+		Vol+		Title List		Smart / List
	Recall		Fav / Marker / PC				
	Prog+		CH+ / Page+				
	Vol-		Vol-				
	Mute		Mute / Dimmer				
	Prog-		CH- / Page-				
	Audio		Audio / Lang I/II				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	[...]		Subtitle / EQ				
	I<<		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	>>I		>>I / Preset+				
	Help		Sleep / Timer				
	Rec		Rec / Rec Mode				

