










 

 


Original	Recharge
Speakers TV Audio Bravia Sync	Shift + Sound / Title
Power AV Bravia Sync	Shift + Power
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
♥ Fav / Marker / PC	Fav / Marker / PC
[≡] Text / Goto	Text / Goto
0	0
Enter	Guide / EPG / -/--
Red	Red / Netflix / Search

Original	Recharge
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Top Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Options	Setup / OPT /
Home/Menu	Menu / Home
Sound Mode	Sound / Title
I<</Preset-	I<< / Preset-
←	Shift + Left
→	Shift + Right
>>I/Preset+	>>I / Preset+












 




 




Original	Rechange
 <</Tuning-	 << / Tune-
 Play	 Play / Slow
 >>/Tuning+	 >> / Tune+
 [...]	 Subtitle / EQ
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Prog+	 CH+ / Page+
 Display	 Display / Media
 O)))	 Audio / Lang I/II
 Vol-	 Vol-
 Prog-	 CH- / Page-
 Sleep	 Sleep / Timer

Original	Rechange







Original	Recharge
 Eject	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ♥	 Fav / Marker / PC
 0	 0
 Enter	 Guide / EPG / -/-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Recharge
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Pop Up Menu	 Smart / List
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options/Tools	 Setup / OPT /
 Function	 Info / Angle
 Home/Menu	 Menu / Home
 Sound Mode	 Sound / Title
 I<</Preset-	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I/Preset+	 >>I / Preset+





Original		Rechange		Original	Rechange
	<</Tuning-		<< / Tune-		
	Play		Play / Slow		
	>>/Tuning+		>> / Tune+		
	[...]		Subtitle / EQ		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		
	Mute		Mute / Dimmer		
	Vol+		Vol+		
	Display		Display / Media		
	O)))		Audio / Lang I/II		
	Vol-		Vol-		
	Sleep		Sleep / Timer		





Original	Rechange
Speakers TV Audio Bravia Sync	Sound / Title
Power AV Bravia Sync	Shift + Power
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
♥ Fav / Marker / PC	Fav / Marker / PC
[≡] Text / Goto	Text / Goto
0	0
Red Red / Netflix / Search	Red / Netflix / Search
Green Green / APP / Repeat	Green / APP / Repeat

Original	Rechange
Yellow Yellow / YouTube / Repeat	Yellow / YouTube / Repeat
Blue Blue / Prime Video / Random	Blue / Prime Video / Random
Top Menu D.Menu / Top	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Return Back / Return	Back / Return
Down	Down
Home/Menu	Menu / Home
[...]	Subtitle / EQ
Mute	Mute / Dimmer
Vol+	Vol+
Prog+	CH+ / Page+
Display	Display / Media
Vol-	Vol-
Prog-	CH- / Page-





	Original	Recharge	Original	Recharge
SLEEP	Sleep	TIMER SLEEP Sleep / Timer		

