


 


 


 





 
 

 
 
 


 
 

 





 

 

 





	Original	Rechange	Original	Rechange
	Power			I<<
	Sleep			Folder +
	Display			Folder -
	Play Mode / Tuning Mode			Play
	Repeat / FM Mode			Play
	Clear			>>
	EQ			<<
	Tuner Memory			Pause
	Timer Menu			Stop
	Up			Volume +
	Down			Volume -
	Right			Function +
	Left			Function -
	OK			
	Return			
	Tool Menu			
	>>I	