

 
 





 

 

 
 

 
 
 

 

 
 
 

 
 

 
 

 
 


 






 
 


 









 
 










 
 

 

 
 



 
 

 






Original		Rechange		Original		Rechange	
	Power		Power		Time/Text		Text
	1		1		Timer		Shift + AV
	2		2		Tv/Video		TV/R
	3		3		[...]		Subt
	4		4		O)))		Dual
	5		5		-/--/Clear		Guide
	6		6		System Menu		Menu
	7		7		Title List		List
	8		8		Timer List		Format
	9		9		Menu		D. Menu
	0		0		Top Menu		Shift + Menu
	PR+		Ch +		Eject		Eject
	PR-		Ch -		Return		Back
	Vol+		Vol +		Tools		Options
	Vol-		Vol -		Enter		Ok
	Input Select		AV		Up		Up
	Display		Info		Down		Down





Original	Recharge	Original	Recharge
	Right		Right
	Left		Left
	Play		Play
	Stop		Stop
	Pause		Pause
	>>/I>		>>
	<</<I		<<
	>>I		>>I
	I<<		I<<
	→		SHIFT +  Shift + Right
	←		SHIFT +  Shift + Left
	Visual Search		Blue
	Set		Pre Ch
	Sur		Sleep
	Rec		Rec
	Rec Pause		SHIFT +  Shift + Pause
	Rec Stop		SHIFT +  Shift + Stop
	Rec Mode		SHIFT +  Shift + Rec
	Synchro Rec		3D
	Chapter Mark		Red
	Mark Erase		SHIFT +  Shift + Eject
	Camera		Exit
	Progressive		Green
	[+]		Yellow
	Power Tv		SHIFT +  Shift + Power
	HDD		Smart
	DVD		Media
	1 Tv		SHIFT +  Shift + 1
	2 Tv		SHIFT +  Shift + 2
	3 Tv		SHIFT +  Shift + 3
	4 Tv		SHIFT +  Shift + 4
	5 Tv		SHIFT +  Shift + 5
	6 Tv		SHIFT +  Shift + 6
	7 Tv		SHIFT +  Shift + 7





Original		Rechange		Original	Rechange
	8 Tv	 + 	Shift + 8		
	9 Tv	 + 	Shift + 9		
	0 Tv	 + 	Shift + 0		
	-/--/Clear Tv	 + 	Shift + Guide		
	Prog + Tv	 + 	Shift + Ch +		
	Prog - Tv	 + 	Shift + Ch -		
	Tv/Video Tv	 + 	Shift + TV/R		

