





 
 



 


 
 
 



 
 


 
 



 


 




 



 








 
 



 



 


 
 
 
 




 

 

 



 


 


 




Original	Recharge	Original	Recharge
 Power	 Power	 [=]	 Text
 Input	 AV	 Google Play	 Media
 Digital/Analog	 Options	 Netflix	 Shift + Smart
 Tv/Radio	 TV/R	 Red	 Red
 Exit	 Exit	 Green	 Green
 Ext. Box Menu	 Menu	 Yellow	 Yellow
 1	 1	 Blue	 Blue
 2	 2	 Action Menu	 D. Menu
 3	 3	 Guide	 Guide
 4	 4	 APPS	 Shift + Media
 5	 5	 Back	 Back
 6	 6	 TV	 3D
 7	 7	 Up	 Up
 8	 8	 Home	 Smart
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 [i+]/[?]	 Info	 Left	 Left





Original		Rechange		Original		Rechange	
	OK		Ok		[...]		Subt
	Vol +		Vol +		Help		Format
	Vol -		Vol -				
	Mute		Mute				
	Prog +		Ch +				
	Prog -		Ch -				
	Recall		Pre Ch				
	Audio		Dual				
	<<		<<				
	Play		Play				
	>>		>>				
	I<<		I<<				
	Pause		Pause				
	>>I		>>I				
	Rec		Rec				
	Stop		Stop				
	Title List		List				

