



 

 

 









 
 











 

 





 














 
 

 

 

 










Original	Recharge
 Power	 Power
 Power Tv	 Shift + Power
 Open/Close	 Eject
 Theatre Sync	 Smart
 Tv Input	 AV
 Tv CH+	 Ch +
 Tv CH-	 Ch -
 Display	 Info
 Function	 Options
 Disc Skip	 Media
 Sound Field	 Red
 Movie/Music	 Green
 Dynamic Bass	 Yellow
 Video Format	 Blue
 Audio	 Dual
 Subtitle/D.Tuning	 Subt
 Angle	 Text

Original	Recharge
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 System Menu	 Menu
 Muting	 Mute
 Picture Navi	 List
 Vol+	 Vol +
 Vol-	 Vol -
 DVD Menu	 D. Menu





Original	Rechange
Menu TV	Shift + D. Menu
-/-- Tv	Guide
10/0 Tv	Shift + 0
Return Tv	Shift + Back
1 Tv	Shift + 1
2 Tv	Shift + 2
3 Tv	Shift + 3
4 Tv	Shift + 4
5 Tv	Shift + 5
6 Tv	Shift + 6
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
OK	Ok
Return	Back
Up	Up
Down	Down

Original	Rechange
Right	Right
Left	Left
Tv Vol+	Shift + Vol +
Tv Vol-	Shift + Vol -
Up Tv	Shift + Up
Down Tv	Shift + Down
Right Tv	Shift + Right
Left Tv	Shift + Left
[]/Display	3D
Play	Play
Pause	Pause
Stop	Stop
>>/>/Tuning +	>>
<</</Tuning -	<<
>>/>/Preset+	>>
<</</Preset-	<<
OK Tv	Shift + Ok





Original	Recharge	Original	Recharge
 →/Advance/Step I>	 Format		
 ←/Replay/<I Step	 TV/R		
 DVD Top Menu	 +  Shift + Menu		
 Enter Tv	 Pre Ch		

