

 
 





 

 
 




 


 



 


 











 


 


 
 

 
 






	Original	Recharge		Original	Recharge
	Power		Power		[i+]/[?]
	Source		AV		DISPLAY INFO
	[+]		3D		RETURN BACK
	I<<		I<<		ZOOM
	>>I		>>I		TOP MENU MENU
	<<		<<		Up
	>>		>>		Down
	Stop		Stop		Right
	Play		Play		Left
	Pause		Pause		OK
	Red		Red		1
	Green		Green		2
	Yellow		Yellow		3
	Blue		Blue		4
	Repeat		Shift + Text		5
	Audio		Dual		6
	Guide		Guide		7
					8



