



| Original | Recharge |
|----------|-------------------|
| Eject | Eject / Surround |
| HDD | Shift + 7 |
| DVD | Shift + 2 |
| Power | Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| Prog+ | CH+ / Page+ |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| Prog- | CH- / Page- |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Input | AV / Input / RDS |
| Audio | Audio / Lang I/II |

| Original | Recharge |
|-------------|---------------------------|
| 0 | 0 |
| Clear | Exit / Cancel / Clear |
| TV/DVD | TV/Radio / |
| Subtitle | Subtitle / EQ |
| Angle | Info / Angle |
| Play Mode | Shift + Play / |
| Zoom | Zoom / Size |
| System Menu | Shift + D.Menu / Top Menu |
| Title List | Sound / Title |
| Timer | Sleep / Timer |
| Top Menu | D.Menu / Top |
| Up | Up |
| Menu | Menu / Home |
| Left | Left |
| Enter | OK |
| Right | Right |
| Return | Back / Return |



