



Original	Recharge
Open/Close	Eject / Surround
HDD	Shift + 7
DVD	Shift + 2
Power	Power
1	1
2	2
3	3
Prog +	CH+ / Page+
4	4
5	5
6	6
Prog -	CH- / Page-
7	7
8	8
9	9
Input Select	AV / Input / RDS
Audio	Audio / Lang I/II

Original	Recharge
0	0
Subtitle	Subtitle / EQ
TV / DVD	TV/Radio /
Red / Top Menu	Red / Netflix / Search
Red / Top Menu	D.Menu / Top
Green / Menu	Green / APP / Repeat
Green / Menu	Menu / Home
Yellow / Chapter Mark	Yellow / YouTube / Repeat
Blue / Erase Mark	Blue / Prime Video / Random
System Menu	Smart / List
Title List	Sound / Title
TV Guide	Guide / EPG / -/--
Schedule	Fav / Marker / PC
Up	Up
Info	Info / Angle
Left	Left
Enter	OK





Original	Recharge
Right	Right
Return	Back / Return
Down	Down
Options	Setup / OPT /
I<< / Day -	I<< / Preset-
← Page	Shift + Left
Page →	Shift + Right
>>I / Day +	>>I / Preset+
<< / <II / <I	<< / Tune-
Play	Play / Slow
I> / II> / >>	>> / Tune+
Display	Display / Media
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
Rec Stop	Shift + Stop /
→ / Synchro Rec	Shift + OK

Original	Recharge
Rec Mode	Shift + Rec / Rec Mode
TV Vol +	Vol+
TV Prog +	Shift + CH+ /
TV Power	Shift + Power
TV Vol -	Vol-
TV Prog -	Shift + CH- /
TV Input	Shift + AV / Input / RDS

