



Original	Recharge
Power	Power
Power Theatre	Shift + Power
Menu	Menu
Top Menu	Shift + Menu
Return	Back
Muting	Mute
Volume+	Vol +
Volume-	Vol -
Up	Up
Enter	Ok
Down	Down
Right	Right
Left	Left
Play	Play
Pause	Pause
Stop	Stop
<</</Tuning-	<<

Original	Recharge
I>/>>/Tuning+	>>
I<</Preset-	I<<
>>I/Preset+	>>I
[*] Display	Info
<-/Replay/<II Step	Ch -
Step II>/Advance/→	Ch +
Clear	Exit
Disc Skip	Pre Ch
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9



Slow



Original	Recharge
 0	 0
 Angle	 Red
 Subtitle/D.Tuning	 Subt
 Audio	 Dual
 Dynamic Bass	 Blue
 Movie/Music	 Yellow
 Sound Field	 Green
 Progressive	 Options
 Function	 TV/R
 Display	 Shift + Info
 AMP Menu	 Media
 Sleep	 Sleep
 Picture Navi	 Guide

Original	Recharge





Original		Rechange	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	TV Vol+		Vol +
	TV Vol-		Vol -
	TV CH+		Ch +
	TV CH-		Ch -
	Tv/Video		TV/R

Original		Rechange	

