



 

	Original	Rechange	Original	Rechange
	Power	Power		Vol-
	TV/VTR	TV/Radio /		Play / Slow
	Eject	Eject / Surround		Stop / Hold
	1	1		Pause / Step / Freeze
	2	2		Search >>
	3	3		>>I / Preset+
	4	4		I<< / Preset-
	5	5		X2
	6	6		<< Search
	7	7		Skip
	8	8		Wheel >/Frame
	9	9		Up
	0	0		< Wheel/<
	-/--	Guide / EPG / -/--		Down
	Prog+	CH+ / Page+		Right
	Prog-	CH- / Page-		Left
	Vol+	Vol+		Menu / Home











Original

Recharge

	Execute		Blue / Prime Video / Random
	Input Select		AV / Input / RDS
	Audio Monitor		Audio / Lang I/II
	Time Clear		Shift + Exit / Cancel / Clear
	Auto/Manu		Setup / OPT /
	Tracking Normal/Slow ▼		Shift + CH- /
	Display		Display / Media
	Tracking Normal/Slow ▲		Shift + CH+ /
	Counter Reset		Back / Return
	Rec		Rec / Rec Mode
	Tape Speed SP/LP		Zoom / Size
	Still Adjust I> Slow+		Shift + >> /
	Still Adjust I> Slow-		Shift + << /
	Quick Timer		Sleep / Timer
	Timer Check		Shift + Sleep / Timer
	Showview		Picture / Format
	VPS/PDC		D.Menu / Top

Original

Recharge

	Once		Red / Netflix / Search
	Daily		Green / APP / Repeat
	Weekly		Yellow / YouTube / Repeat




Original
Recharge

	Power		Power
	Display		Display / Media
	TV/VTR		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	Vol+		Vol+
	Vol-		Vol-
	Prog+		CH+ / Page+

Original
Recharge

	Prog-		CH- / Page-
	Audio Monitor		Audio / Lang I/II
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]		Text / Goto
	[]		Smart / List

