

 





 



















 
 









 
 

 

 

 
 
 

 
 
 


 




 



 







Original		Recharge		Original		Recharge	
	Power		Power		Display		Info
	Power Tv		Shift + Power		Up		Up
	Input Tv		Shift + AV		Left		Left
	Mute Tv		Shift + Mute		OK		Ok
	TV Vol+		Shift + Vol +		Right		Right
	TV Vol-		Shift + Vol -		Down		Down
	Tv Prog+		Shift + Ch +		Mute		Mute
	Tv Prog-		Shift + Ch -		Vol+		Vol +
	Input+		Ch +		Vol-		Vol -
	Input-		Ch -		Return		Back
	STD		1		AMP Menu		Menu
	Movie		2		I<<		I<<
	Game		3		Pause		Pause
	Music		4		>>I		>>I
	P.Audio		5		<<		<<
	Stereo		6		Play		Play
	Night		Sleep		>>		>>





	Original	Recharge	Original	Recharge
[Square]	Stop	[Square]		
[PAIRING]	Pairing	[APP MEDIA]		

