

 

 



 

 


 

 


 

 
 

 
 

 
 

 







 
 
 
 

 
 


 

 
 
 


 
 
 


 










 
 


 




 

 

 






Original	Rechange
 Power	 Power
 Theatre	 Smart
 One-Touch Play	 Shift + Play
 Eject	 Eject
 Sleep	 Sleep
 Display	 Shift + Info
 Function	 Options
 Tone	 3D
 Night	 Shift + Sleep
 Dimmer	 Shift + Mute
 Repeat	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Rechange
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Enter	 Pre Ch
 Picture Navi	 List
 Audio	 Dual
 Subtitle	 Subt
 D.Tuning	 Media
 Angle	 Format
 DVD Top Menu	 Shift + Menu
 DVD Menu	 D. Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right





Original		Rechange		Original		Rechange	
	Down		Down		Sound Mode+		Ch +
	Return		Back		Sound Mode-		Ch -
	System Menu		Menu				
	[+] Display		Info				
	I<< / Preset-		I<<				
	Replay		Shift + Left				
	Advance		Shift + Right				
	>>I / Preset+		>>I				
	<< / <I / Tuning-		<<				
	Play		Play				
	>> / I> / Tuning+		>>				
	Pause		Pause				
	Stop		Stop				
	TV		TV/R				
	Muting		Mute				
	Volume+		Vol +				
	Volume-		Vol -				





Original	Rechange	Original	Rechange
Power	Power	Source	AV
[i+]	Info	Tools / Options	Options
Analog	Media	Home / Menu	Menu
Digital	Smart	Muting	Mute
1	1	Volume+	Vol +
2	2	Volume-	Vol -
3	3	Prog+	Ch +
4	4	Prog-	Ch -
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
Text	Text		
-/--	Shift + Guide		
Guide	Guide		

Original	Rechange	Original	Rechange
Power	Power	Source	AV
[i+]	Info	Tools / Options	Options
Analog	Media	Home / Menu	Menu
Digital	Smart	Muting	Mute
1	1	Volume+	Vol +
2	2	Volume-	Vol -
3	3	Prog+	Ch +
4	4	Prog-	Ch -
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
Text	Text		
-/--	Shift + Guide		
Guide	Guide		

