
 

 


 









 

 










Original	Rechange
 A.Space/A.Cue	 Smart
 Music Scan	 Media
 Play Mode	 Dual
 Play Mode Shuffle	 Subt
 Play Mode	 Options
 Clear	 Exit
 Fader	 Mute
 Repeat	 Text
 Time	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Rechange
 9	 9
 10	 0
>10 button" data-bbox="506 235 539 268"/> >10	 Guide
 Line Out Level+	 Vol +
 Line Out Level-	 Vol -
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 >>	 >>
 <<	 <<
 >>	 >>
 <<	 <<

