


Original	Rechange	Original	Rechange
Open/Close	Eject / Surround	4	4
Power	Power	5	5
Stereo/Mono	Shift + Audio / Lang I/II	6	6
Name	Text / Goto	Band	TV/Radio /
Dimmer	Shift + Mute / Dimmer	Angle	Info / Angle
Repeat	Green / APP / Repeat	7	7
Tv/Video	AV / Input / RDS	8	8
Clear	Exit / Cancel / Clear	9	9
Memory	Rec / Rec Mode	Sound Field	Sound / Title
Time	Sleep / Timer	Subtitle	Subtitle / EQ
Muting	Mute / Dimmer	>10 button"/> >10	Guide / EPG / -/-
Play Mode	Shift + Play /	10/0	0
1	1	Enter	Fav / Marker / PC
2	2	Display	Display / Media
3	3	Vol+	Vol+
Function	Smart / List	Vol-	Vol-
Audio	Audio / Lang I/II	I<</Preset-	I<< / Preset-

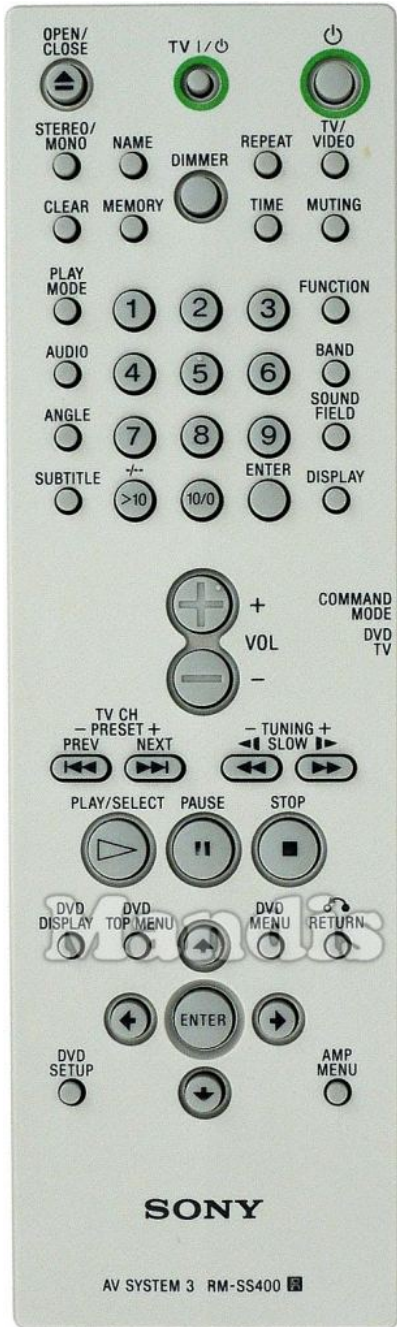




 

 

 



 

 

 


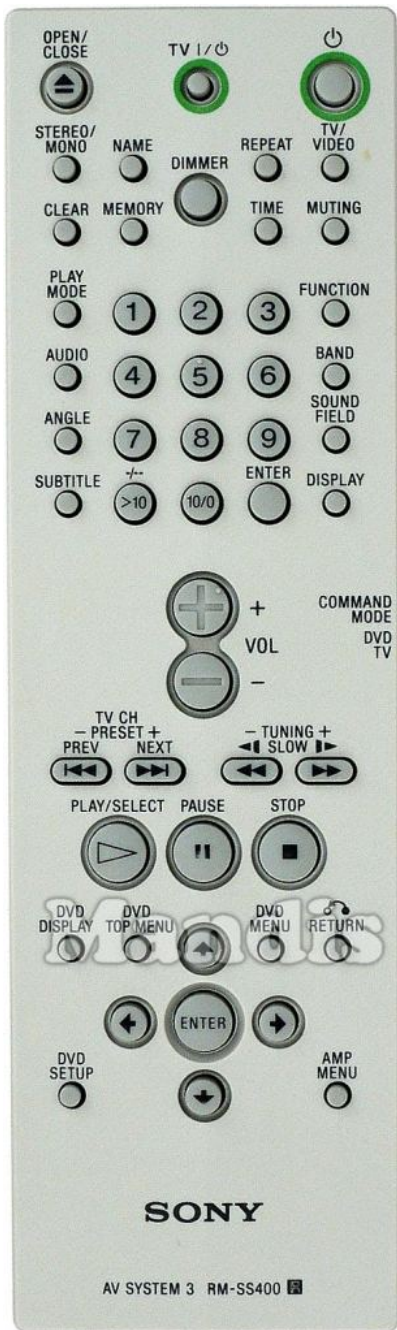


Original	Recharge	Original	Recharge
	>> /Preset+		>> / Preset+
	<</Tuning-/<		<< / Tune-
	Tuning+/Slow		>> / Tune+
	Play/Select		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	DVD Display		Shift + Display / Media
	DVD Top Menu		Shift + D.Menu / Top Menu
	Up		Up
	DVD Menu		D.Menu / Top
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	DVD Setup		Setup / OPT /
	Down		Down
	AMP Menu		Menu / Home

Original	Recharge





Original	Rechange
 Power Tv	 Power
 Stereo/Mono	 Audio / Lang I/II
 Tv/Video	 AV / Input / RDS
 Memory	 Rec / Rec Mode
 Muting	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Function	 Smart / List
 4	 4
 5	 5
 6	 6
 Band	 TV/Radio /
 7	 7
 8	 8
 9	 9
 Sound Field	 Sound / Title

Original	Rechange
 >10	 Guide / EPG / -/-
 10/0	 0
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 Tv CH-	 CH- / Page-
 Tv CH+	 CH+ / Page+
 Enter	 OK
 AMP Menu	 Menu / Home

