

 







 


 
 



 

 



 
 
 


 







Original	Recharge
 Power	 Power
 [i+]	 DISPLAY INFO
 [+]	 PICTURE FORMAT
 <</<	 <<
 Play	 PLAY MODE
 Pause	
 >>/ >	 >>
 Sync Menu	 TOP MENU MENU
 Stop	 ■
 Theatre	 SEARCH TV/R
 Digital	 E-MANUAL D.MENU
 Analog	 APP MEDIA
 [...]	 AD SUBT
 Audio	 SOUND DUAL
 Guide	 -/-- GUIDE
 Source	 TIMER AV
 Up	 ▲

Original	Recharge
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Return	 SHIFT + RETURN BACK Shift + Back
 Options	 SETTINGS OPT Options
 Home	 HOME SMART Smart
 Red	 A Red
 Green	 B Green
 Yellow	 C Yellow
 Blue	 D Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





	Original	Rechange		Original	Rechange
	7		7		
	8		8		
	9		9		
	0		0		
	Text		Text		
	FAV		Pre Ch		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		
	Prog+		Ch +		
	Prog-		Ch -		
	Back		Back		

	Original	Rechange

