

 




 

 

 



 

 



 
 
 


 



 
 
 

 
 

 

 
 








 

 

 

 

 

 
 











Original		Rechange		Original		Rechange	
	Power		Power		1		1
	Open/Close		Eject		2		2
	FM Mode		TV/R		3		3
	Tuner Memory		Format		4		4
	Repeat		Text		5		5
	Theatre Sync		Shift + Power		6		6
	Timer Menu		Smart		7		7
	Sleep		Sleep		8		8
	Display		Info		9		9
	Time/Text		AV		0		0
	Dimmer		Media		Clear		Exit
	Function+		Ch +		Folder+		Shift + Ch +
	Function-		Ch -		Folder-		Shift + Ch -
	Picture Navi		List		DVD Top Menu		Menu
	Audio		Dual		DVD/USB Menu		D. Menu
	Subtitle		Subt		EQ		3D
	Angle		Options		Return		Back






 







 

 





 
 
 

 
 
 




 






 
Original	Recharge
Display/[*]	+ Shift + Info
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
Volume+	Vol +
Volume-	Vol -
I<</Preset-	I<<
<-/Replay/< Step	GUIDE Guide
·->/Advance/Step >	FAV PRE-CH Pre Ch
>> /Preset+	>>
<</Tuning -/<	<<
Play	PLAY MODE Play
>>/Tuning	>>
Pause	Pause
Stop	Stop

Original	Recharge





Original	Rechange
 Power	 Power
 Tv/Video	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10/0	 0
 -/--	 Guide
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -

Original	Rechange
 Enter	 Ok

