 




 



 



 


 












 



 

 


 
 
 
 
 
 


 

 

 






 



 

 

 

 




Original		Rechange		Original		Rechange	
	Power		Power		1		1
	Open/Close		Eject		2		2
	FM Mode		TV/R		3		3
	Tuner Memory		Format		4		4
	Repeat		Text		5		5
	Theatre Sync		Shift + Power		6		6
	Timer Menu		Smart		7		7
	Sleep		Sleep		8		8
	Display		Info		9		9
	Time/Text		AV		0		0
	Dimmer		Media		Clear		Exit
	Function+		Ch +		Folder+		Shift + Ch +
	Function-		Ch -		Folder-		Shift + Ch -
	Picture Navi		List		DVD Top Menu		Menu
	Audio		Dual		DVD/USB Menu		D. Menu
	Subtitle		Subt		EQ		3D
	Angle		Options		Return		Back



