 




 






 
 


 



 
 





 

 
 

 


 
 


 
 
 



 









 

 

 

 


 

 
 
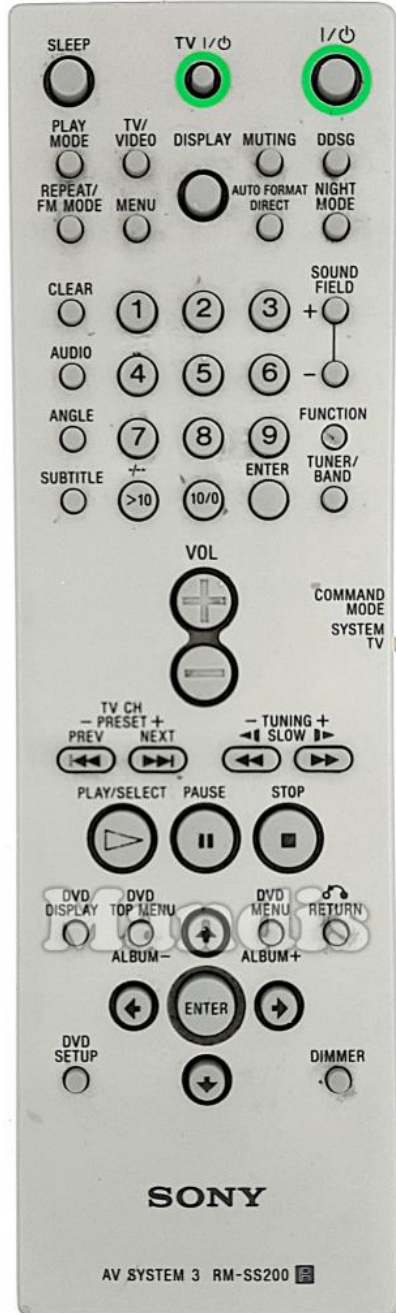 


 
Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Sleep		Sleep		5		5
	Play Mode		Shift + Play		6		6
	Tv/Video		TV/R		7		7
	Repeat Mode		Text		8		8
	Menu		Smart		9		9
	Display		Info		10/0		0
	Muting		Mute		>10 / -/--		Guide
	Auto Format		List		Enter		Pre Ch
	Night Mode		AV		Sound Field+		Ch +
	Clear		Exit		Sound Field-		Ch -
	Audio		Dual		Function		Media
	Angle		Red		Tuner Band		Format
	Subtitle		Subt		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		I<</Preset-		I<<
	3		3		>>I/Preset+		>>I





	Original	Rechange	Original	Rechange
	<</>I Slow/Tune-		<<	
	Tuning+/Slow		>>	
	Play		Play	
	Pause		Pause	
	Stop		Stop	
	DVD Display		Shift + Info	
	DVD Top		Menu	
	DVD Menu /		D. Menu	
	Return		Back	
	Up		Up	
	Left		Left	
	Enter		Ok	
	Right		Right	
	Down		Down	
	DVD Setup		Options	
	Dimmer		Blue	



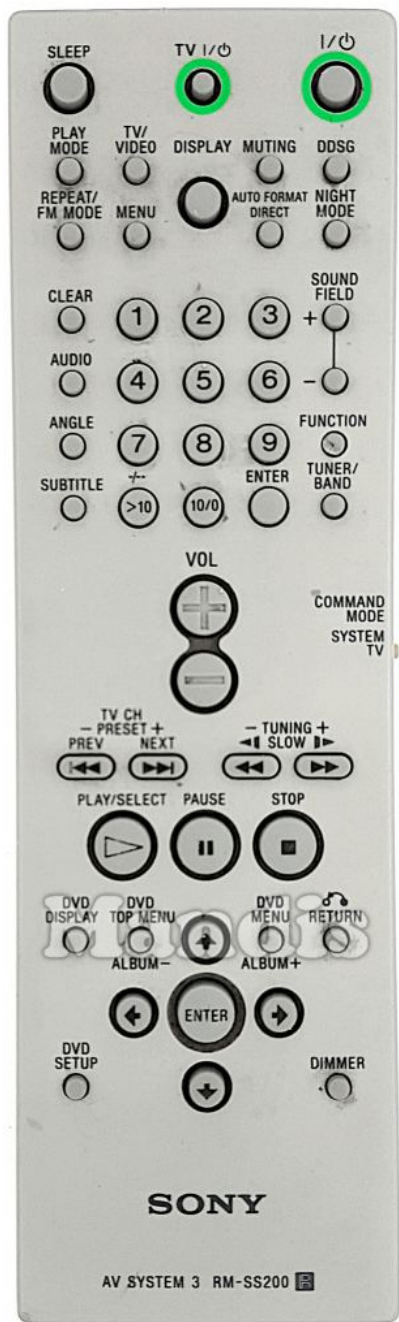

	Original	Rechange		Original	Rechange
	Power		Power		
①	1		1		
②	2		2		
③	3		3		
④	4		4		
⑤	5		5		
⑥	6		6		
⑦	7		7		
⑧	8		8		
⑨	9		9		
10/0	0		0		
>10	-/--		Guide		
VOL +	TV Vol+		Vol +		
VOL -	TV Vol-		Vol -		
CH +	TV CH+		Ch +		
CH -	TV CH-		Ch -		
TV/VIDEO	Tv/Video		TV/R		

	Original	Rechange

