




























 



 





Original	Recharge	Original	Recharge
 Power	 Power	 Red	 Red / Netflix / Search
 1	 1	 Green	 Green / APP / Repeat
 2	 2	 Yellow	 Yellow / YouTube / Repeat
 3	 3	 Blue	 Blue / Prime Video / Random
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Rec List	 Smart / List
 6	 6	 Source	 AV / Input / RDS
 7	 7	 *	 Menu / Home
 8	 8	 Micro	 Display / Media
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 [i+]	 Info / Angle	 Right	 Right
 [=]	 Text / Goto	 Left	 Left
 YouTube	 Shift + Yellow / YouTube /	 OK	 OK
 Netflix	 Shift + Red / Netflix /	 Back	 Back / Return
 Disney Plus	 Shift + Green / APP /	 TV	 TV/Radio /
 prime video	 Shift + Blue / Prime Video / Random	 Home	 Shift + Menu / Home





	Original	Recharge	Original	Recharge
	Vol+	 Vol+		
	Vol-	 Vol-		
	Mute	 Mute / Dimmer		
	Recall	 Fav / Marker / PC		
	CH+	 CH+ / Page+		
	CH-	 CH- / Page-		
	Audio	 Audio / Lang I/II		
	[...]	 Subtitle / EQ		
	Help	 Zoom / Size		
	<<	 << / Tune-		
	Play	 Play / Slow		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Pause	 Pause / Step / Freeze		
	Exit	 Exit / Cancel / Clear		

