



Original		Rechange		Original		Rechange	
	Power		Power		8		8
	Mute		Mute / Dimmer		9		9
	[]/[+]		TV/Radio /		0		0
	Input		AV / Input / RDS		-/--		Guide / EPG / -/--
	[=]		Text / Goto		C		Fav / Marker / PC
	[X]/[o]		Zoom / Size		Red		Red / Netflix / Search
	[◆]		Picture / Format		Green		Green / APP / Repeat
	[?]/[i+]		Subtitle / EQ		Yellow		Yellow / YouTube / Repeat
	↔>		Smart / List		Blue		Blue / Prime Video / Random
	[]/[=i]		Display / Media		Menu		Menu / Home
	1		1		+		Up
	2		2		-		Down
	3		3		→←		OK
	4		4		+		Vol+
	5		5		-		Vol-
	6		6		Progr+		CH+ / Page+
	7		7		Progr-		CH- / Page-





Original	Recharge	Original	Recharge
Power VTR1	Shift + Power		
>> VTR1	>> / Tune+		
Play VTR1	Play / Slow		
<< VTR1	<< / Tune-		
Stop VTR1	Stop / Hold		
Pause VTR1	Pause / Step / Freeze		
Rec VTR1	Rec / Rec Mode		
Progr+ VTR1	Shift + CH+ /		
Progr- VTR1	Shift + CH- /		

Original	Recharge























Original	Recharge	Original	Recharge
 Power VTR2	 Power		
 Progr+ VTR2	 CH+ / Page+		
 Progr- VTR2	 CH- / Page-		
 Play VTR2	 Play / Slow		
 >> VTR2	 >> / Tune+		
 << VTR2	 << / Tune-		
 Stop VTR2	 Stop / Hold		
 Pause VTR2	 Pause / Step / Freeze		
 Rec VTR2	 Rec / Rec Mode		

Original	Recharge





















Original	Rechange	Original	Rechange
 Power VTR3	 Power		
 Play VTR3	 Play / Slow		
 >> VTR3	 >> / Tune+		
 << VTR3	 << / Tune-		
 Stop VTR3	 Stop / Hold		
 Pause VTR3	 Pause / Step / Freeze		
 Prog+ VTR3	 CH+ / Page+		
 Progr- VTR3	 CH- / Page-		
 Rec VTR3	 Rec / Rec Mode		





Original	Recharge	Original	Recharge
 Power MDP	 Power		
 Play MDP	 Play / Slow		
 >> MDP	 >> / Tune+		
 << MDP	 << / Tune-		
 Stop MDP	 Stop / Hold		
 Pause MDP	 Pause / Step / Freeze		
 Progr+ MDP	 CH+ / Page+		
 Progr- MDP	 CH- / Page-		

